



**TURNER
HASTINGS**
EUROPEAN BATHWARE

16 McPherson Road, Smeaton Grange, NSW, 2567
PO Box 7412, Mount Annan, NSW, 2567
Phone 1300 00 2284
Fax 02 4647 5564
ABN 56 263 133 253
www.turnerhastings.com.au
info@turnerhastings.com.au

INSTALLATION INSTRUCTIONS

ACRYLIC BATH

Please read these instructions carefully. Incorrect installation could nullify your warranty.

IMPORTANT

ALL INSTALLATIONS MUST COMPLY WITH COUNCIL AND LOCAL AUTHORITY BY-LAWS.
IT IS THE RESPONSIBILITY OF THE INSTALLER TO ENSURE THAT THE WASTE IS MADE WATERTIGHT BY MEANS OF SILICONE SEALANT OR CAULKING COMPOUND.

1. Your new bath has been manufactured to the highest possible standards. However please inspect for any possible damage that may have occurred in transit.

NOTE: Warranty does not cover damage to bath caused in transit or installation.

The protective film must be removed from around the waste and along the tiling bead prior to installation in order to make a watertight seal at these points possible.

2. POP -UP WASTE INSTALLATION.

Please ensure that the bath is placed on wooden blocks or bricks to protect the waste body under the bath.


Remember to plan for access panels to simplify further service intervention to waste when required.

3. BATH INSTALLATION

Locate the bath in the proposed position.

IMPORTANT

The bath must be installed level on all top edges.
The rim and the base of the bath
must be fully supported.


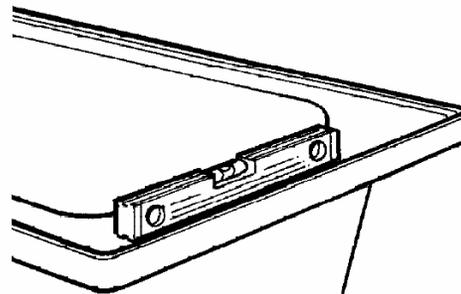


4. BASE SUPPORT

Floor should be flat, level and free of any bumps and protrusions.

Install the bath in a bed of weak mortar slurry mix (6:1) ensuring the base is fully supported.

Do not hang bath by the rim.

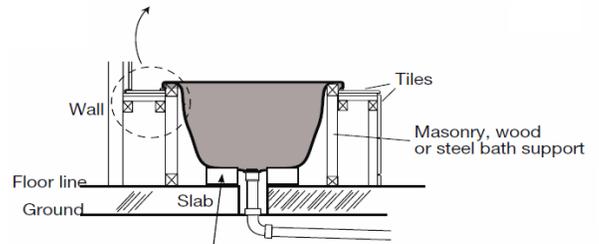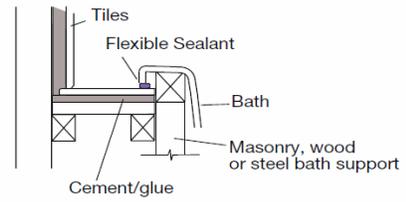

This bath is not self supporting and does require a support at the base via sand/ cement slurry.

When Recessing The Bath Edge Into A Wall

Australian Standards 2023/1977 Section 1.5 specifies, "The section of the bath to be installed abutting, shall be provided with a tiling or bead not less than 12mm in height".

Below is the recommended way to install when recessing into a wall. (not included with the bath).

