


Universal pop up waste installation instruction

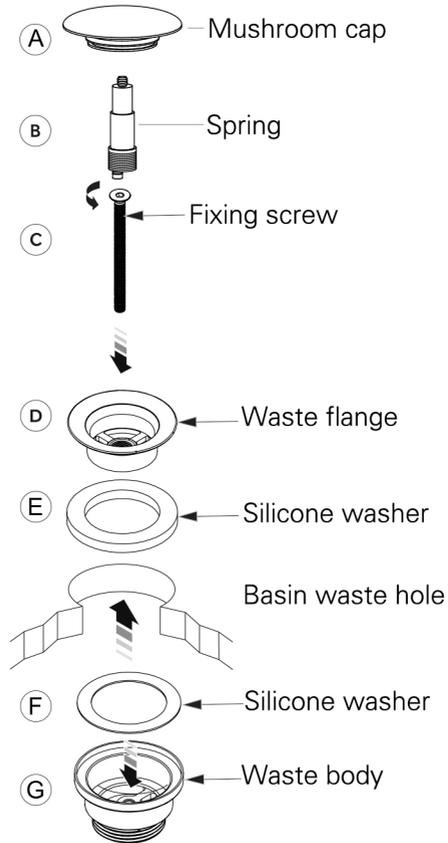

1. Locate the silicone washer into the recess on the top face of the waste body (G). Ensure that the silicone washer is in contact with the mounting surface.
2. The hole in the basin needs to be between 43mm - 48mm. From below push the waste assembly up under the hole in the basin, and hold in place (F).
3. Apply silicone using a silicone gun to ensure a watertight seal so the waste holds water.
4. Slide the flange washer over the tail of the waste flange and locate the assembly into the waste hole (D).