


# Installation Instructions for Pull Out Pop-Up Bath Waste

## Parts:

1. Silicone washer
2. Washer
3. Spring
4. Waste body
5. Silicone washer
6. Silicone washer
7. Back Nut

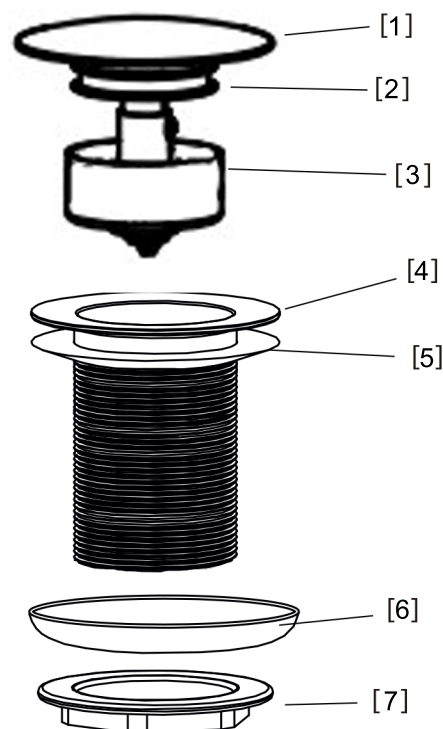

## Installation:

1. Identify all components are present prior to installation
2. Fit the waste body (4) and silicone washer (5) to the bathtub
3. Apply silicone using a silicone gun to ensure a watertight seal so the waste holds water.
4. Fit the silicone washer (6) to the underneath of the bathtub as shown in the diagram, secure by tightening the Back nut (7)
5. Fit the Mushroom Cap (1) to the brass Click-clack spring (3)

## Care Instructions:

Whilst modern plating techniques are used in the manufacture of this product, the surface will be affected if cleaned incorrectly.

This waste should be cleaned with a damp cloth, no corrosive or abrasive agents or materials should be used or come into contact with the surface, or this will void the warranty.