


## INSTALLATION INSTRUCTIONS

### TEIDE URINAL - TOP INLET | TE580URT

Thank you for purchasing the Turner Hastings Teide urinal. If you have any questions during the installation of his product, please do not hesitate to call us on 1300 00 2284.

#### 1. Check all parts are included in the box:

Teide urinal + all parts pictured below.

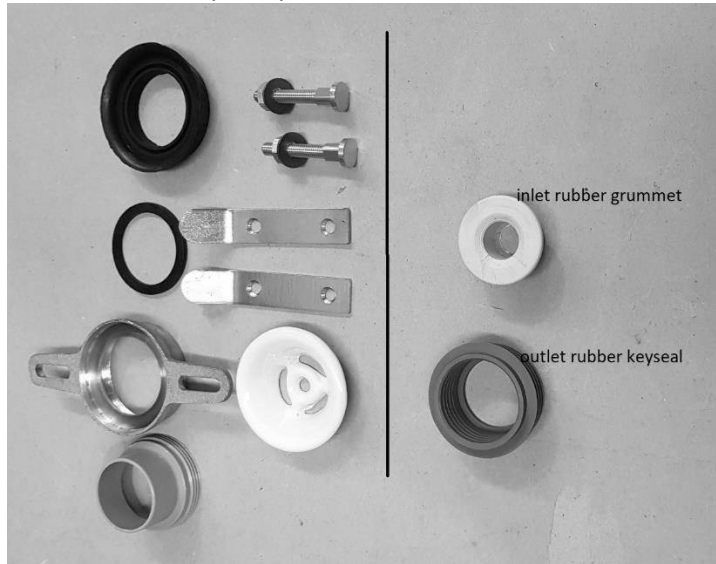

#### 2. Assemble urinal:

- a. Assemble and attach waste outlet to the urinal (FIG 2)
- b. Install rubber grommet in top of urinal

#### 3. Before wall sheeting is on:

- a. Determine desired height of urinal on wall.
- b. Put noggin in where fixing brackets are
- c. Bring 20mm copper inlet pipe out above urinal and run down the wall
- d. Bring 50mm outlet pipe out at correct height in relation to brackets. NOTE: grey rubber key seal will only fit into a 50mm PVC socket (Will not fit into 50mm pipe!). Face of the socket should stop 5-10mm short of the finished face of the wall.

#### 4. Install wall sheeting / tiles

#### 5. Fix brackets to the wall

#### 6. Lubricate both the inlet pipe and the outlet rubber key seal

#### 7. Install urinal on wall

- a. Hook urinal over the wall brackets
- b. Then let down the bottom of the urinal so the key seal slides into the 50mm PVC socket.
- c. Connect 20mm copper pipe into top of urinal

#### 8. Flush water through the urinal to test for leaks

#### 9. Seal around the urinal with a sanitary grade silicone

FIG 1:

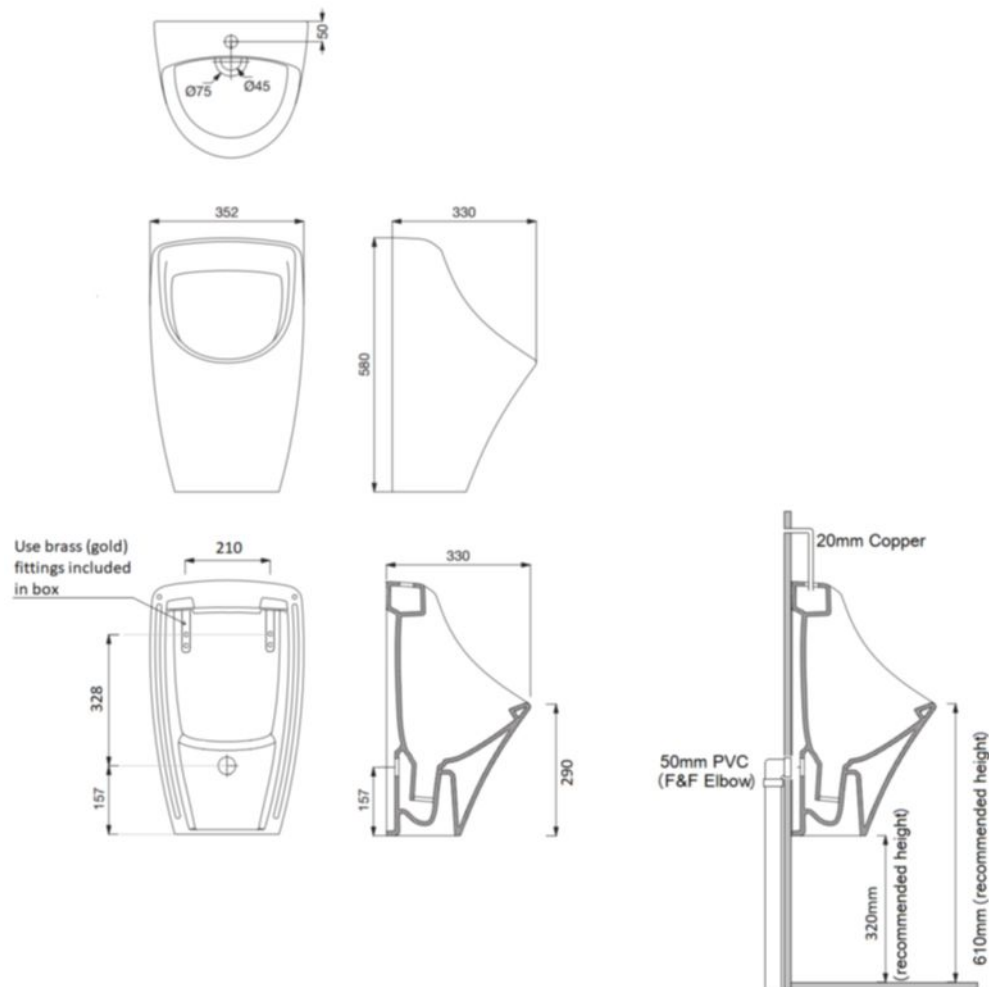


FIG 2:

