

Rough-In

1.S-TRAP requires a 140mm centre set out

2.P-TRAP:180MM


Screw fixing:

- 1-Position pan onto pan connector and mark location of pan fixing holes on the floor.
- 2-Drill two holes in the marked positions on the floor. The hole diameter is dependent on the type of fixing system and floor finish.


IMPORTANT-DO NOT USE THE PAN SCREW HOLES AS A GUIDE FOR DRILLING AS THIS MAY CRACK THE PAN.

- 3-Ensure that the area around the floor is clean and free from building material.
- 4-Run a bead of acetic cured silicone sealant at a height of 8mm approximately fully around the foot of the pan which contacts the floor. Use Wedges around the foot base (if required) so that the **maximum height of acetic cured silicone sealant is not greater than 5mm on completion of bedding.**
- 5-Connect pan to pan connector and fix to the floor with suitable corrosion resistant screws. The acetic cured silicone sealant will bed the pan to the floor. Remove any excess silicone.

**Fixing Hole
Cover Detail for Bedding
Installations**

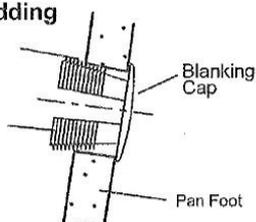

**Bracket Fixing
Detail**

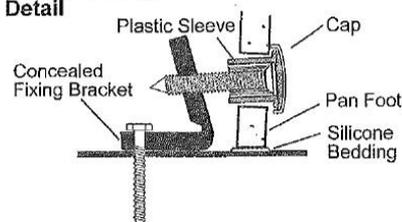

**Concealed Fixing
Bracket**

