



**TURNER
HASTINGS**

EUROPEAN BATHWARE

Creating elegance

16 McPherson Road, Smeaton Grange, NSW, 2567

PO Box 7412, Mount Annan, NSW, 2567

Phone 02 4648 3200

Fax 02 4647 5564

ABN 56 263 133 253


www.turnerhastings.com.au

sales@turnerhastings.com.au

SEMI RECESSED BASIN INSTALLATION GUIDE


1

Adhere the stone to the cabinet with silicone. Be sure to seal all edges to prevent water damage

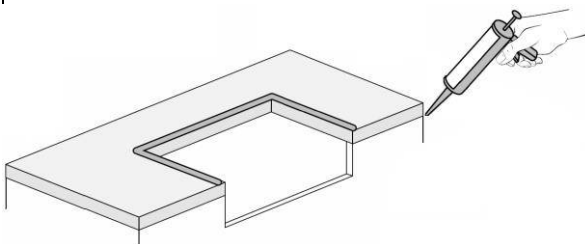


2

Adhere the basin to the cabinet with silicone.

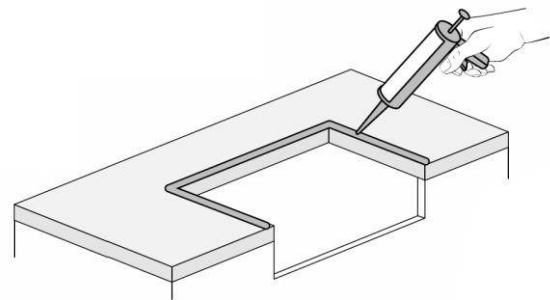

3

Place the basin in position and clean up any excess silicone

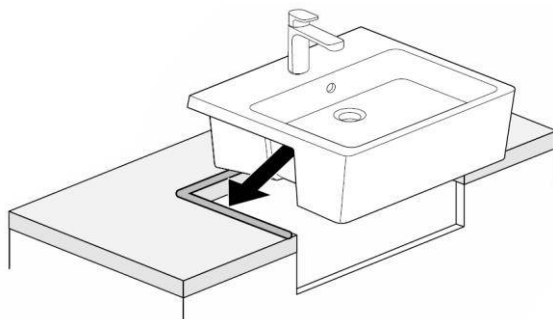

4

Be sure to neatly seal all edges of the basin to prevent the ingress of water.

