


TURNER HASTINGS

MADE IN ENGLAND

Wall-hung furniture Installation Instructions

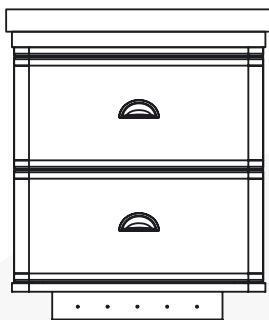

Important Information:

Please check the products for transport damage and that contents are complete before installation.

Consult a qualified plumber if you have any problems installing this product.

Complaints made following installation regarding the above cannot be accepted.



Medium wall-hung unit

Thank you for purchasing this product.

These instructions relate to our basins and pedestals.

Before you start check you have the necessary tools for installation.

Before you begin:

- ⚠ **Always handle our products with care and attention.**
Ceramic products are brittle, and may chip, crack or break if not handled carefully.
Broken ceramic is extremely sharp. Take care not to over tighten screws and fittings.

Over tightening may lead to breaks or chips in the ceramic.

These instructions are for installing the basin on a solid wall only. For other installations including wall bracing please contact us directly for further guidance.

Before installing the product, please inspect for damage incurred during transport.

- ⚠ TURNER HASTINGS can not take responsibility for damaged products after or during their installation. We recommend that the guidance of a qualified plumber is sought throughout the installation process.

Always observe the plumbing and building regulations in the area the product is being installed in.

TURNER HASTINGS reserves the right to amend the design of its products without notice, as specified in the company catalogue.

Tools and fittings:

The following tools are necessary for the installation of this product.

We would once again recommend that a qualified plumber carry out the installation of this product.



drill



screwdriver



spirit level



pencil



spanner



silicon

Prior to drilling check for hidden cables & pipes

- Prior to installation ensure all necessary pipework and plumbing is carried out.
- Check wall for level.


- Measure the distances between hole centres along the rear top rail of the unit.

Using these measurements, mark up the wall where holes will need to be drilled - taking care to position the unit so that fixings will secure into brick and not mortar (this is crucial to ensure a solid and secure installation).

- When wall mounting units, caution needs to be taken to account for pipes concealed in the wall cavity

Waste Pipe Outlet Dimensions

a = min extension of trap
b = max extension of the trap

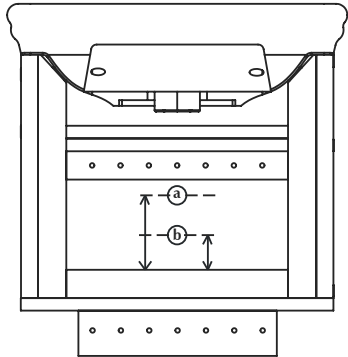

Measurements taken from the centre of waste outlet on the trap to the top edge of the bottom fixing batten. The dimensions have been calculated using Imperial's waste traps. We cannot accept if alternative fittings and taps are used.

* 5mm clearance to drawer cut out

	Standard Waste	Pop-Up Waste
Trad Bottle Trap	202mm min *188mm max	*188mm min *188mm max
Modern Bottle Trap	189mm min *165mm max	175mm min *164mm max
P Trap	214mm min *200mm max	200mm min *199mm max
S Trap	N/A	N/A


Prior to drilling check for hidden cables & pipes

Prior to drilling check for hidden cables & pipes

- Check all holes are marked up in the correct location.
 - Drill all necessary holes and insert wall plugs.
 - Support the unit from underneath and offer it up to the wall. Secure all fixings through the unit and into the wall, ensuring all connections are tight and firm.
 - Secure basin to unit with a small bead of silicon sealant to finish.
 - You are now free to connect all plumbing fixtures to the basin (taps, waste etc.)
- This completes the installation of the vanity unit.

Fitting onto a stud wall

When installing our wall hung furniture units into a stud wall it is necessary to add additional support in order to ensure the unit can be securely and safely installed. Install the wall bracing at a minimum of 2x6" and the width of the unit ensuring that there are an adequate number of stud beams to anchor the bracing. Mark the centre line and continue to finish the wall as required. Mount the unit using suitable fixings for your wall type.

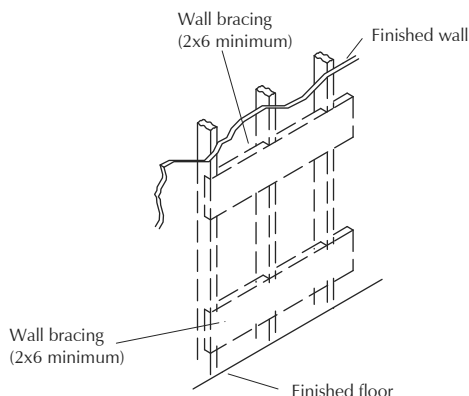

! We strongly recommend to mount the unit using the wall bracing method. The furniture unit is tested to withstand a maximum load in line with guidance set by European standards.

! If the furniture is fixed using a basin frame we cannot guarantee the load bearing capacity of the unit.

Care & Maintenance:

We recommend that all products are purchased with the assistance of a specialist bathroom retailer and always installed by an experienced installer who is a You have just acquired a high quality and expensive piece of furniture and are about to put it in the most hostile environment in the house! We have been producing these fine products for many years and our experience is that they will give years of pleasurable service if a few simple measures are taken to look after them.

Ceramic:

The glazed finish of your sanitary ware should be cleaned after use by applying a little cream type cleaner. Apply using a sponge or damp cloth and rinse thoroughly with clean water. Cleaners containing abrasive materials should be avoided.

Metal:

Parts with Chrome/Gold finish should be cleaned with a damp soft cloth only.

The use of detergents and abrasive cleaning agents should be avoided as these will cause damage to the finish of the metal.

To preserve the finish of Gold and Nickel plated items Imperial recommend the use of soap and water only for cleaning and ensure that the product is thoroughly dried after with a soft lint free cloth.

Do not use abrasive polish or cleaners. Commercial/domestic spray cleaners are not to be used as they contain strong chemicals that will burn and even remove the plated finish.

In the event of strong bleaches or cleaning products being used resulting in plated finish being chemically burnt/tarnished will be void any warranty or guarantee.

Care should be taken with hand gels and mouth wash as they contain alcohol which will burn and tarnish the plated finish.

By adopting our recommended care and cleaning advice will give many years of pleasure, we hope you enjoy your new bathroom fittings.

Care & Maintenance:

Wood:

Bathroom furniture can be wiped over using a damp cloth and dried with a soft duster. The use of polishes using silicon or any abrasive materials can damage the wood finish. Natural wax polishes should be used sparingly and applied using a soft dry cloth.

Always use your best efforts to keep the wood surface dry. The finish will deteriorate and the underlying timber could become permanently stained if subjected to long term contact with water.

Dark and light oak oiled finishes

Units and cabinets are manufactured from solid wood and have been crafted and finished by hand within Imperial's factory.

The finish is applied by hand onto solid wood to maintain the natural look of the grain. The surface is not finished with a clear lacquer.

Like all hand made quality furniture within the home, care needs to be taken against spillage otherwise the finish could become compromised resulting in permanent staining of the wood surface.

Spillages should be wiped dry immediately after use with a soft lint free cloth. In the event of staining or damage a care kit or recovery kit is required. Please visit www.rubimonocoat.com for advice and sales of these products.

Technical specification:

Wall-hung unit

