

# TURNER HASTINGS

## INSET AND UNDERMOUNT SINK INSTALLATION GUIDES


### 1. INSET



1. Place the sink upside down on the bench top. Trace around the outer edges on the bench top.



2. Draw a second line the correct distance inside the marked line based on the sink you have.

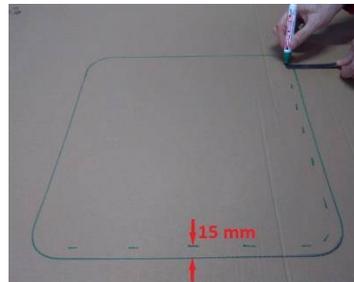


3. Cut out the bench top on the inside line



4. Install the waste in the sink



5. Apply silicone around the edge of the bench top

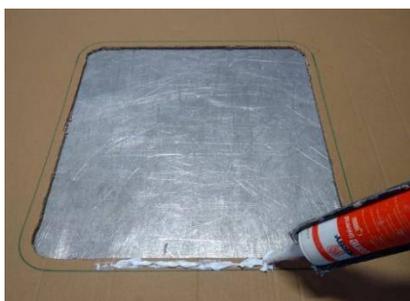

6. Place the sink into the benchtop, wipe away excess silicone, and leave to cure for 24 hours before use



# TURNER HASTINGS


## 2. UNDERMOUNT



1. Place the sink upside down on the bench top. Trace around the outer edges on the bench top.



2. Draw a second line the correct distance inside the marked line based on the sink you have. Allow for a 5mm internal overhang.

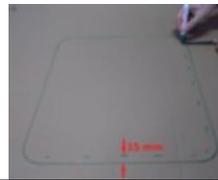

3. Cut out the bench top on the inside line, and polish inside edge.



4. Install the waste in the sink



5. Measure the overall height of the sink and install a shelf or supporting beams the same distance down the inside of the cabinet, place the sink on this shelf



6. Apply some approved flexible watertight silicone to the top of the sink. **DO NOT USE EPOXY OR ANY OTHER SOLID ADHESIVE AS THIS MAY CRACK THE SINK OVERTIME AND WILL VOID THE WARRANTY**, then place the benchtop over the top of the sink. wipe away excess silicone, and leave to cure for 24 hours before use

